

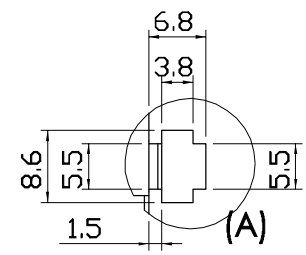


<JDB-128> Specification of Direct Type

- Note:1.The dimension of machine changes according to different motor,The motor lid is optional accessory.
 2.We install the sensor outside.(right or left side)(optional accessory)
 3.Applicable motor:100W,200W,400W.

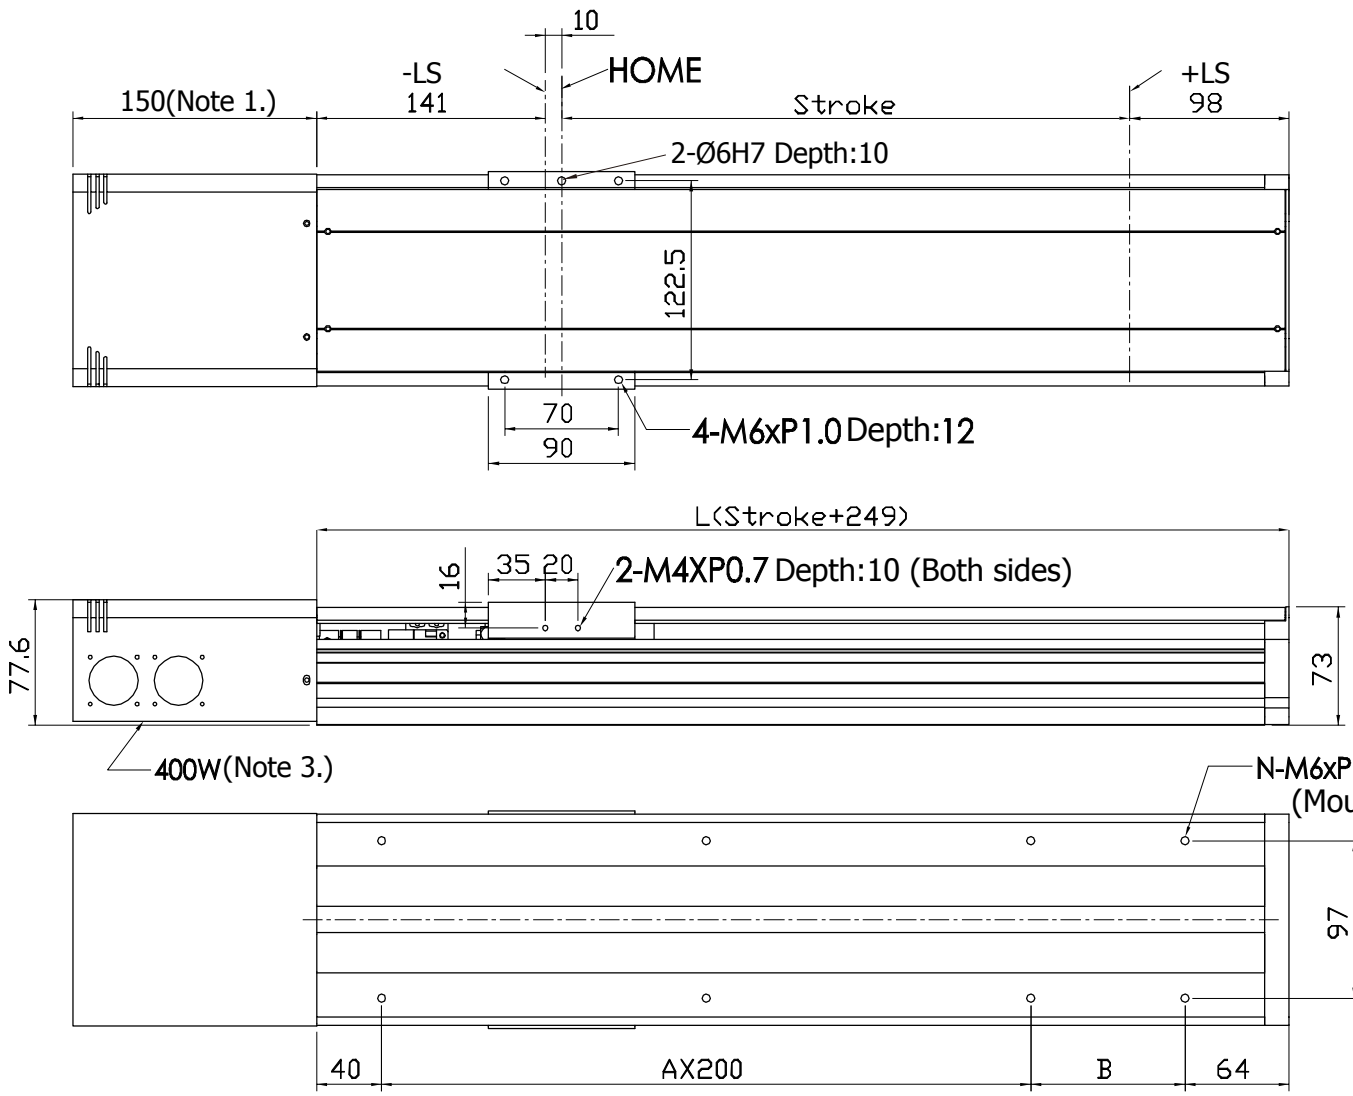

We install the Sensor outside.(Note 2.)

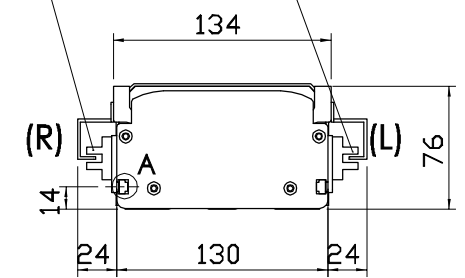

- SENSOR Operation:
 1.+LS
 2.HOME
 3.-LS

Unit:mm

Stroke	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200
L	349	399	449	499	549	599	649	699	749	799	849	899	949	999	1049	1099	1149	1199	1249	1299	1349	1399	1449
A	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6	6
B	45	95	145	195	45	95	145	195	45	95	145	195	45	95	145	195	45	95	145	195	45	95	145
N	6	6	6	6	8	8	8	8	10	10	10	10	12	12	12	12	14	14	14	14	16	16	16
Weight(kg)	6.4	7.1	7.7	8.3	8.9	9.5	10.1	10.7	11.3	11.9	12.5	13.1	13.9	14.7	15.5	16.3	17.1	17.9	18.7	19.5	20.3	21.1	21.9