
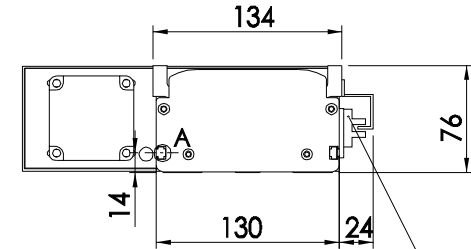


<JDB-130> Specification of Indirect Type-2R

- Note: 1. We install the sensor outside. (right or left side) (optional accessory)
 2. Applicable motor: 100W, 200W, 400W.

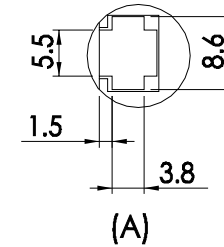

We install the Sensor outside. (Note 1.)

SENSOR Operation:

1. +LS
2. HOME
3. -LS

Unit:mm

Stroke	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200
S	430	480	530	580	630	680	730	780	830	880	930	980	1030	1080	1130	1180	1230	1280	1330	1380	1430	1480	1530
L	360	410	460	510	560	610	660	710	760	810	860	910	960	1010	1060	1110	1160	1210	1260	1310	1360	1410	1460
A	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6	6
B	56	106	156	206	56	106	156	206	56	106	156	206	56	106	156	206	56	106	156	206	56	106	156
N	6	6	6	6	8	8	8	8	10	10	10	10	12	12	12	12	14	14	14	14	16	16	16
Weight(kg)	6.9	7.5	8.1	8.7	9.3	9.9	10.5	11.1	11.7	12.3	12.9	13.5	14.1	14.9	15.7	16.5	17.3	18.1	18.9	19.7	20.5	21.3	22.1