

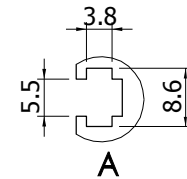


## <JDBS-128> Specification of Direct Type

- Note:1.The dimension of machine changes according to different motor and the motor lid is optional accessory.  
 2.When you fill oil the sensor need to be back to home coordinate.  
 3.We install the sensor outside.(right or left side) (optional accessory)  
 4.Applicable motor:100,200W,400W.
- ∅ 10 Hole of negative pressure exhaust.

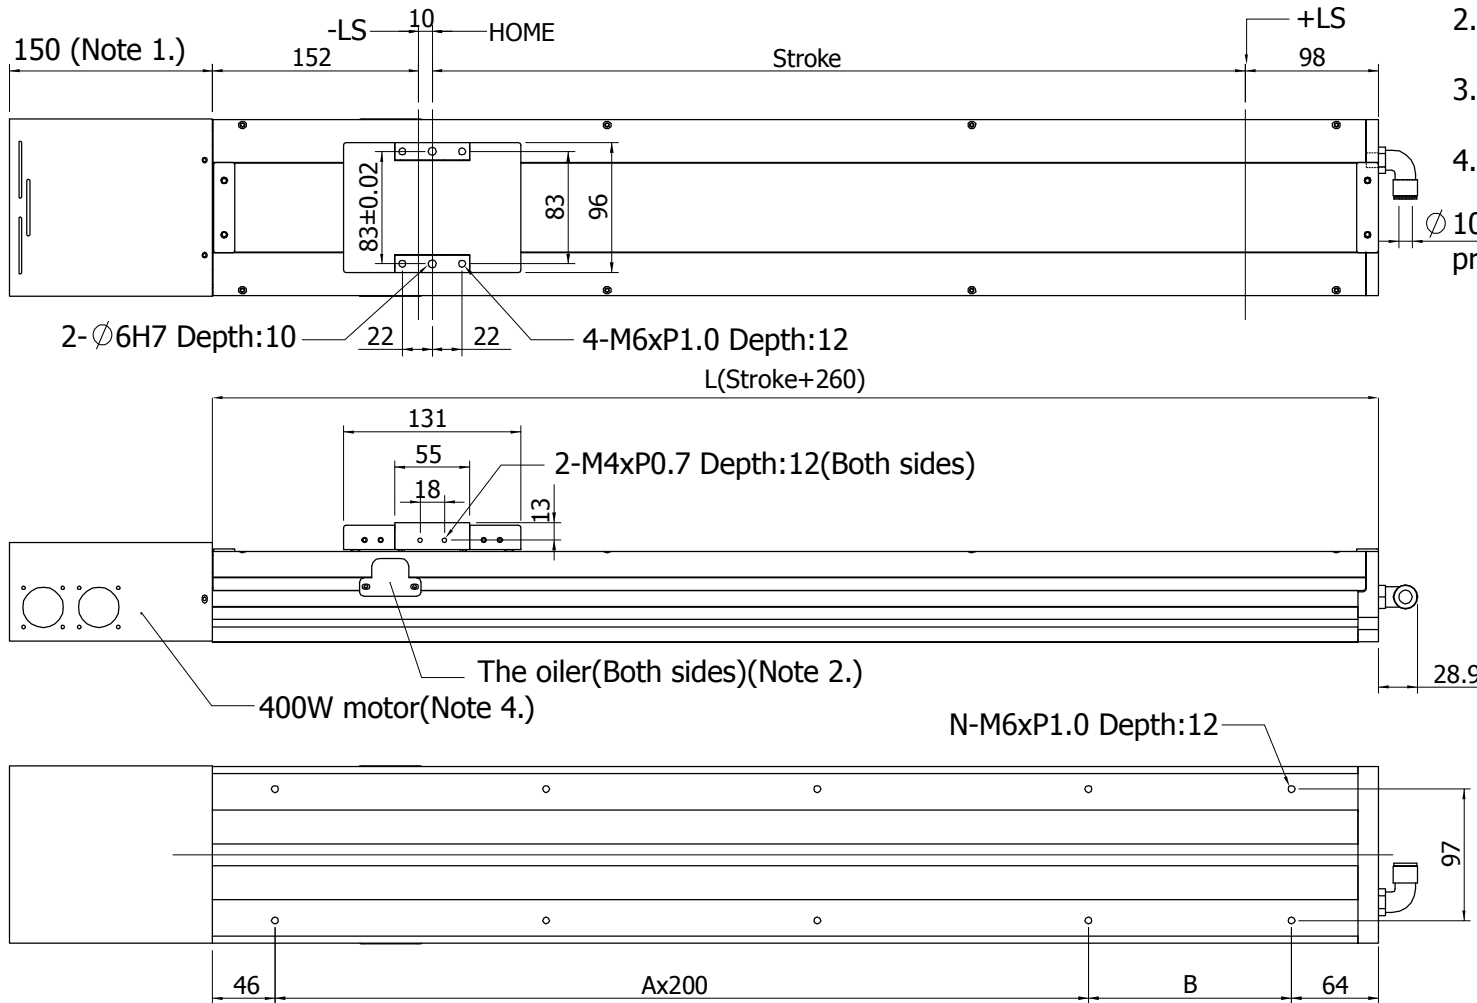

The outer sensor.(Note 3.)

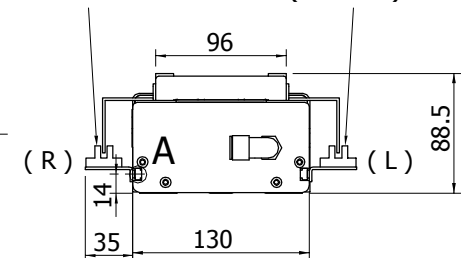

SENSOR Operation:

- 1.+LS
- 2.HOME
- 3.-LS

Unit:mm

Stroke	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200
L	360	410	460	510	560	610	660	710	760	810	860	910	960	1010	1060	1110	1160	1210	1260	1310	1360	1410	1460
A	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6	6
B	50	100	150	200	50	100	150	200	50	100	150	200	50	100	150	200	50	100	150	200	50	100	150
N	6	6	6	6	8	8	8	8	10	10	10	10	12	12	12	12	14	14	14	14	16	16	16
Weight(kg)	7.9	8.5	9.1	9.7	10.3	10.9	11.5	12.1	12.7	13.3	13.9	14.5	15.1	16.2	17.3	18.4	19.5	20.6	21.8	22.9	24.0	25.1	26.2