
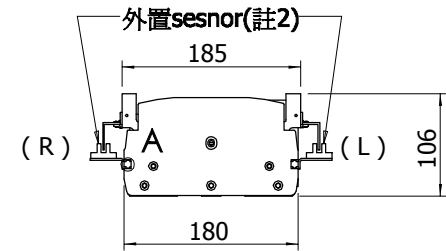


< JDT-180 規格表 >

- 註: 1.基於內部設計為方便拆卸上蓋
請於此四個固定孔選擇單一側
將螺絲鬆開(長行程使用)
(要做此動作前需先回到HOME點)
2.外置sensor(L,R二側)(選配)
3.適用馬達200W.400W.750W

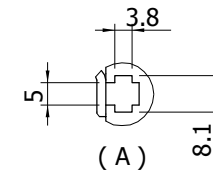

SENSOR出線號數如下:

- 1.正極限 +LS
- 2.原點 HOME
- 3.負極限 -LS

單位: mm

行程Stroke	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500	2600
L	815	915	1015	1115	1215	1315	1415	1515	1615	1715	1815	1915	2015	2115	2215	2315	2415	2515	2615	2715	2815	2915
A	3	3	4	4	5	5	6	6	7	7	8	8	9	9	10	10	11	11	12	12	13	13
B	100	200	100	200	100	200	100	200	100	200	100	200	100	200	100	200	100	200	100	200	100	200
N	10	10	12	12	14	14	16	16	18	18	20	20	22	22	24	24	26	26	28	28	30	30
C	3	3	4	4	5	5	6	6	7	7	8	8	9	9	10	11	11	12	12	13	13	14
D	50	150	50	150	50	150	50	150	50	150	50	150	50	150	50	150	50	150	50	150	50	150
M	10	10	12	12	14	14	16	16	18	18	20	20	22	22	24	24	26	26	28	28	30	30
重量 kg	15.4	17.8	20.2	22.6	25.0	27.4	29.8	32.2	34.6	37.0	39.4	41.8	43.0	44.2	45.4	46.6	47.8	49.0	50.2	51.4	52.6	53.8